

High Quality Power Station

Instruction Manual

ARES



What's in the Box

Packing List

1 Pcs Portable Solar Power Station

1 Pcs AC charging cable

1Pcs Solar charge cable to MC4

1 Pcs 12 V car charging cable

1 Pcs Parallel cable (Only for Parallel Version)

1Pcs Manual



Ares Power Station



AC Charging Cable





Solar Charge Cord



Car Charging Cable



Manual

Please visit our website www.srportables.com to register your product

ARES High Quality Power Station

Thank you for purchasing the ARES Series high quality power station.

To ensure your personal safety, property safety, and good user experience, please read this user manual carefully before operation and keep it for future reference.



Charging Instructions

Before using your new Power Station ARES Series, make sure to plug it into a suitable power outlet until it is fully charged. After that, you can start your exciting journey with it.









Contract of trust with our customers

Sustainable development requires clear, ethical business principles and we make sure our products are environmentally friendly and we avoid polluting or non-recyclable materials. We ensure our clients are satisfied with our simple, affordable, reliable and efficient products. Our company believes in continued R&D to match evolving needs of customers and bettering our own parameters. If you have an energy problem, we can fix it sustainably.

INDEX				
No	Section	Page		
Introduction				
1	Product Introduction	4		
2	Parts Description	4		
3	Dimensions	6		
4	Load Capacity	6		

Product Introduction

ARES Series with high capacity and high safety battery pack.

Suitable for emergency off-grid, such as sudden power failure, snowstorm or hurricane, outdoor operation, RV power supply etc. Delivering an impressive power output up to 2400W, fast charging, high capacity and long life cycle.v



Dual-machine parallel output 4800W Max, support more high-power equipment, more durable

Part Description






- Power ON/OFF Button
- Charging Mode Button
- LED Light Button
- DC Output Button
- DC Output x 2 & Cigarette Lighter Socket
- 6 USB Output Button
- USB Output 2 x USB-A & 2 x USB-C
- 8 AC Output Button
- AC Output 4 x AC 2400W
- LCD Screen Display
- PV Input

- Air Intake Vent With Cooling Fan
- OLP Reset
- AC Input
- Grounding Port
- 6 AC Parallel Interface
- LED Light
- Wireless Charging



Reminder: If the battery is low in power, please charge it before use.

Part Description

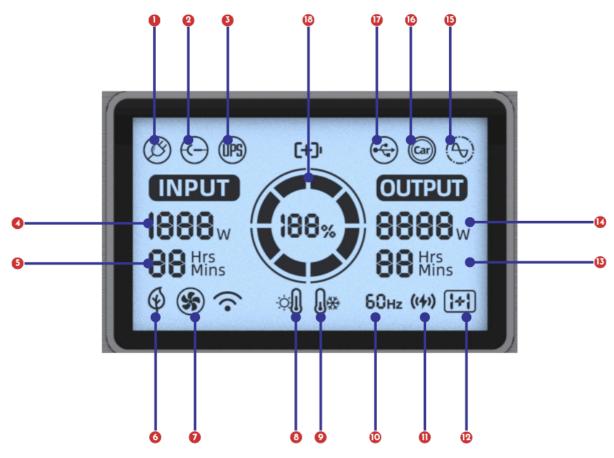

- 1. AC Input: When the AC charging cable is inserted, this label is displayed on the LCD.
- 2. DC Input: When the DC DC/SOLAR PV charging cable is inserted, this label is displayed on the LCD.
- 3. UPS Mode: When the device is in the AC charging state and the AC output is turned on, the UPS mode automatically starts, and this label is displayed on the LCD.
- 4. Input Power: When charging, the display shows "INPUT" and charging power.
- 5. Input Time: When charging, the display shows the full remaining time.
- 6. Quick Charge Switching: When the AC charging mode is used, the label is displayed when the charging mode is switched to slow charge.
- 7. Fan Start Cooling Status: When the fan is running, this label is displayed on the LCD.
- 8. High Temperature Alarm: When the inverter or battery pack temperature is too high, this label is displayed on the LCD.
- 9. Low Temperature Alarm: When the temperature of the inverter or battery pack is too low, this label is displayed on the LCD.
- 10. AC Output Frequency: When the AC switch is turned on, the display displays "OUTPUT" and the icon.
- 11. Wireless Charge: When the wireless charge output, this label is displayed on the LCD.
- 12. AC Parallel State: When the AC output is synchronized, this identifier is displayed on the LCD.
- 13. Output Time: In the output state, the screen displays the remaining output time.
- 14. Output Power: Displays the total used power of DC output, USB-A, USB-C, and AC output.
- 15. AC Outputs: After the AC output switch is turned on, the icon lights up and displays the total AC output power, current remaining time, and current frequency.
- 16. Cigarette Lighter Socket Output: When the Cigarette Lighter Socket Output is turned on, the icon lights up and shows the total power used by the DC output, the current remaining time, and frequency.
- 17. USB Output: When the USB output is turned on, the icon lights up and shows the total power used by the DC output, the current remaining time, and frequency.
- 18. Battery Level Indicator: Displays the current battery level in the form of an energy circle + percentage. The main switch is turned on, and the battery quantity is displayed. During the charging process, the energy circle is displayed dynamically.



Note: Different devices have different USB-C cable agreements. If the USB-C port is not working, please confirm whether the product has electricity

Dimensions



Load Capacity



Laptops (41.4Wh) Around 42 Recharges



32" TV(60W) Around 29 hours



CPAP without heated humidifier (15W) 116 hours



GoPro (5.9Wh) Around 297 Recharges



Floodlight (5W) Around 350hours



Mini Fridge (40W) Around 43 hours



DJ Drone (89.2Wh) Around 19 Recharges



Smartphone (10Wh) Around 175 Recharges



Switch (16Wh) Around 109 Recharges



Safety and Precautions

Safety Warning

♠ WARNING

Please read the following instructions before use for safety. Improper use may result in fire, property damage or personal injury or death. DO NOT use the product with incompatible components or alter the product in any way.

A WARNING

Improper use may result in fire, property damage, or personal injury. Make sure to use the product according to the following safety rules and guidelines.

A WARNING

Donot expose the product to any liquid or submerge in water. If the battery comes into contact with water, it may cause chemical decomposition of the battery. This may cause the battery to catch fire or explode.

SAFETY INSTRUCTIONS

Read the following instructions to ensure safe usage:

DANGER



Non-compliance may very likely lead to serious injury or death

DO NOT disassemble, repair, or modify the unit or the battery.

DO NOT place the unit close to or in a fire or expose it to heat. Keep out of direct sunlight.

DO NOT charge, use or store the unit in a bathroom or in an area exposed to rain or moisture. Only use the output socket to power external devices.

Never connect the output to main power under any circumstances.

DO NOT touch the unit or the plug-in points if your hands are wet.

DO NOT connect any metallic objects to the AC input or output.

DO NOT rub your eyes if fluid from inside the unit gets into your eyes.

DO NOT dispose the unit together with household waste.

DO NOT use any inappropriate power cords.

DO NOT operate the unit above the specified input voltage.

DONOT use the unit if it is not functioning correctly.

DONOT move the unit if it is recharging or in use.

WARNING



Non-compliance may very likely lead to serious injury or death

Use and store the unit only in a clean and dry environment. Do not use and store in dusty and wet environment.

Check the unit prior to every use. Do not use the unit if it is damaged or broken.

DO not use the unit if the power cord is damaged or broken. Keep the unit away from children.

DO NOT let children use the power supply unit. Keep this product away from pets.

DO NOT use or store the unit in an area or environment with high temperature.

Should fluid from inside of the unit come in contact with your skin or clothing, wash the affected areas with tap water. In a storm, unplug the power cord from the socket

DO NOT charge the device through a power system other than the rated voltage.

DONOT place the unit on its side or upside down while in use or storage.

 ${\hbox{DONOT}\,use\,accessories\,for\,other\,usage}.$

CAUTION



Non-compliance may very likely lead to serious injury or death

If rust, peculiar odors, overheating or other abnormal circumstances are observed, stop using the unit immediately and contact the dealer or our customer service center.

The unit complies with all legal requirements for transport of dangerous goods.

Make sure that the unit is properly secured when transporting it in a motor vehicle.

Only charge, use and store the unit within an ambient temperature of 0 to 40°C (32 \sim 104 °F).

Switch the unit off immediately if it has accidentally fallen, was dropped or was exposed to vibrations.

Once the unit is fully charged, unplug the AC charging cable. We are not liable for any damage caused by using different brand charging cables.

Use of different cables will void the product warranty and may cause damage or serious bodily injury.

Product Maintenance:

- 1. Battery life may be reduced or become non-functional if not properly maintained.
- 2. Fully charge and discharge at least every 3 months to ensure battery life.
- 3. Do not store battery with less than 50% charge.

Safety and Precautions

Error Codes

Error code	Significance	Solutions
E01	Battery over voltage	Please disconnect the charging cable and stop charging
E02	Battery under voltage	Please disconnect the output and charge the device
E03	Inverter overheating	Please disconnect the output and wait 1-2 hours before operation
E04	Abnormal input voltage	Please disconnect the charging cable
E05	Abnormal grid frequency	Please disconnect the charging cable
E06	Output voltage anomaly	Please contact customer service center
E07	AC and USB outputs are overloaded or short-circuited	Please disconnect the output and check the electrical equipment
E08	DC output is overloaded or short-circuited	Please disconnect output
E09	Inverter failure	Please contact customer service center
E16	Charge overload	Please disconnect the output load



NOTE: When the DC load is abnormal, the system will automatically turn off the output and will show the fault code. Please disconnect the output and check the electrical equipment then try again. When the USB is abnormal, the corresponding output power will be zero and the system will not show the fault code. PLease disconnect the outputs and check the electrical equipment then try again.

Full Parallel Integration

Double your power right out of the box. No complicated or costly junction boxes—simple plug- and-play technology allows you to link two ARES's together easily. Parallel cable included!




- Step 1: Turn off two AC outputs and then insert the paralleling line.
- Step 2: Turn on both of the AC ON/OFF of two ARES.
- Step 3: Insert and start the loaded equipment.



This feature is only available for ARES. Requires second ARES and sold separately.


Charging Function Description

Re-charging Time

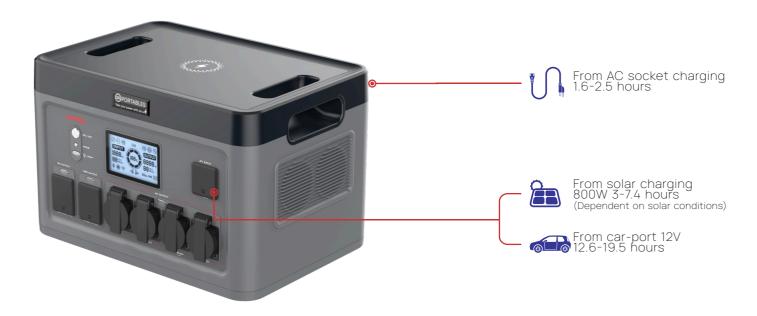

AC Charging

Use the AC charging cable we provided to charge the device. It takes 1.6 to 2.5 hours to full capacity. When LCD showing battery power reached 100%, it means that battery has been full charged and input power will turn off in minutes.

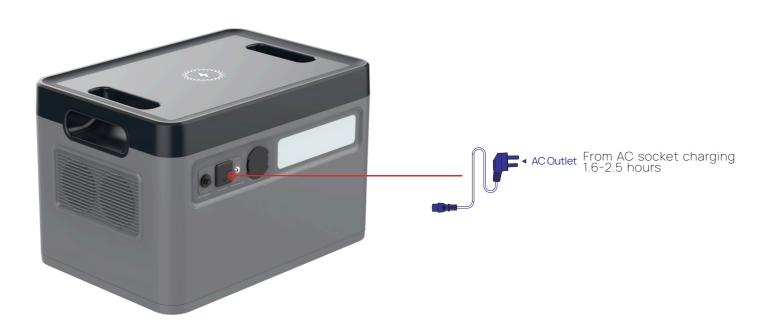



When the device is charging, if the AC input current is more than 20A, the device will be overloaded, a fault code "E16" will be shown on the LCD, the output will be shut off after 10 seconds. Please disconnect the output load, then press the AC switch once to clear it.

12V Car Charger

Use the car charger we provided to charge. It takes 12.6 to 19.5 hours to fully charge. When the LCD shows that the battery power is 100%, it means that the battery is fully charged.





Caution: Do not charge the product with solar PV input and car port at the same time!

Solar Panel Charging

The total open circuit voltage of solar modules after series-parallel connection should not exceed the specified voltage. Please place as many solar panels in direct sunlight as possible. Support 120W/200W/300W/400W/ 600W/800W solar panel charging, the charging time is determined by the sunlight intensity.





Operating Instructions

Re-charging

Use the original AC line to charge; the full charge time is about 1.6- 2.5 hours. When charging, the LCD screen will be lit, the LCD display will provide real-time display data of battery charging, and the device will display 100% when it is fully charged. It is recommended to fully charge the device every 3 months to maintain the life of the device.

Power output attention

Press the output switch to select the desired outlet type. The output port must press the corresponding button to activate the port. When activated, the LCD display will turn on and provide detailed information about the charging output. When no output is activated, the LCD screen will automatically turn off.

Overload condition

If the AC and USB outputs are overloaded or short-circuited, the device will automatically turn off the output power. The code "E07" will be displayed on the LCD screen.

If the DC output is overloaded or short-circuited, the device will automatically turn off the output power. The code "E08" will be displayed on the LCD screen

Discharging

Press the "Power on/off" button for 1 second to turn on the device. Press the "Power on/off" button for 3 seconds to turn off the device. The device uses an advanced battery management system that allows it to charge the connected device through AC or DC output or USB output.

How to switch frequency?

The device can intelligently identify the frequency of voltage when charging and can automatically set the frequency, so please charge before using. After plugging in the charging cable, the display will show the frequency of the current grid voltage; if it displays "50", it is 50Hz, - if it displays "60", it is 60Hz.

You can also manually set and change the voltage frequency. Before using the power station, please confirm the voltage frequency of your electrical equipment, 50 Hz or 60 Hz?

Then press the "Power on/off" button for 1 second to turn on the device. If "50" is displayed on the LCD, it means that the operating frequency of the power station is 50 Hz. If '60' is displayed on the LCD screen, it means 60 Hz.

If the frequency displayed on the LCD display does not match the frequency of the local power grid, you must change the frequency according to the following steps:

- 1. Step 1: Press the button 'Power on/off' for 3 seconds to power off (the LCD display screen will turn off).
- 2. Step 1: Keep pressing the button 'ACOn /Off' with your right finger first and then press the button 'Power On/Off' for 1 second with your left finger, then release both fingers off the buttons. You will see the frequency.

Cooling fan

The equipment is designed with an internal cooling fan to ensure that the product runs within the proper temperature range. When the device experiences a high output load, it will automatically turn on the fan. During discharging and charging, the fan may run intermittently to keep the internal temperature within the operating range. When the AC circuit is activated, the fan is likely to start to ensure normal operation.

Power saving sleep mode

- 1. No charging (AC input + PV), no discharging (DC+ USB + AC). When charging is not connected and only the main switch is turned on, sleep after 5 minutes.
- 2. Any charging is connected (regardless of whether there is power), and it does not sleep.
- 3. USB <5W, DC <5W, AC <25W -- three conditions are met at the same time, and sleep after a delay of 8 hours.
- 4. The self-consumption of the whole machine is less than 5mA after shutting down all switch and sleeping.
- 5. Please turn off the main power switch during transportation, or it will not be used for a long time. Self-consumption after switching off is less than or equal to 200µA.

Equipment cleaning

- 1. Please make sure that the device is disconnected from all input and output devices. Wipe with a clean, dry, non-soft cotton cloth. Remove all foreign objects, dirt, or other obstructions from the vents on both sides. While cleaning foreign objects in the side vents, do not allow debris, dirt or other blockage to enter the equipment.
- 2. Do not use corrosive cleaners or solvents.
- 3. Do not use compressed air to clean the side cooling vents, as it will cause foreign particles to enter
- 4. the interior and cause a short circuit.




Note: To avoid the risk of electric shock, do not use metal objects to clean the ports.

Operating Instructions

Storage

- 1. If it will be stored for more than 1 month, please charge it to 50% capacity and keep it indoors at normal temperature, and the maximum storage time shall not exceed 6 months. Please keep it away from direct sunlight.
- 2. Excessive temperatures will lead to reduced service life, overheating, and fire. Extremely cold conditions below the specified storage range can also impair the performance and service life of the equipment. Please keep away from corrosive chemicals and gases.
- 3. After taking it out of storage, perform a visual inspection to ensure that the appearance of the equipment and all accessories are qualified. Check the vents on the intake and exhaust sides to make sure they are free of foreign objects.

Transport Instructions for Dangerous Goods

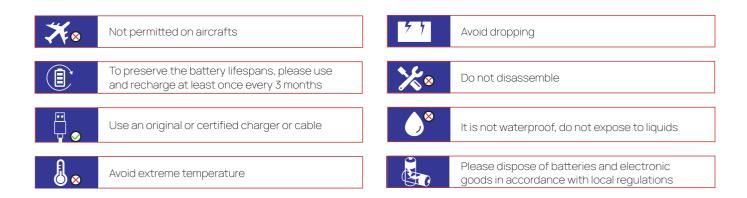



The ARES Series power station meets all legal requirements for the transportation of dangerous goods. The capacity of the lithium battery pack exceeds 100Wh. According to international standards, if the power station is transported by air, it must be transported in accordance with IATA standard packaging. The instructions and labelling requirements of the International Air Transport Association and related declarations must be completed.

Troubleshooting

The device does not discharge

- 1. Check whether the connecting wire has been inserted in right place;
- 2. Check whether the total output power exceeds the rated output power;
- 3. Check whether the temperature of the equipment is too high.

The device is not charging

- 1. Confirm that the AC socket on the wall and the AC charging cable are fully inserted into the AC input terminal;
- 2. The device cannot be charged immediately after it is discharged. Please put it aside for an hour and try again, because it may enter the over-temperature protection.

Product Maintenance

Maintenance

- 1. Check as needed. If the ARES Series power station cannot work regularly, please charge and discharge it every 3 months at normal temperature to keep its service life. Regularly check all ports and wall chargers for any debris, dirt, damage, and corrosion.
- 2. Do not disassemble the device privately.
- 3. Do not cover the equipment with towels, clothes, or other items. Regularly observe the side vents for dust and foreign-matter, and clean them according to the cleaning procedures specified in the manual.

Disposal / Recycling



Do not put the device and its accessories in the trash can. Items must be properly handled in accordance with local laws and regulations. For additional information, please see www.epa.gov

Affirm

Copyrighted equipment. All rights reserved. All trademarks cited here are the property of their respective owners. The information contained in this agreement is subject to change without notice. We are not responsible for any technical or editorial errors or omissions contained in this agreement.

First Edition: January 2023

Technical Specifications

GENERAL PARAMETERS				
Battery Type	Lithium Ion Phosphate 4000 + cycles to 80%			
Rated Capacity	51.2V, 40Ah/2048Wh			
Net Weight	≈ 26kg			
Product Size	430mm*300mm*287mm			
Operating Temp	14 to 104°F (-10 to 40°C)			
Charging Temp	32 to 104°F (0 to 40°C)			
Storage Temp	-4 to 113°F (-20 to 45°C)			

INPUT			
AC Charge Input Voltage	AC 200V-260V~6.5A, 50Hz		
AC Charge Input Power	AC 1500W		
Solar Charge Input	DC 12V-55V, 800W Max,25Amps Max		
Car Charger	DC 12V/24V, 192W Max		

OUTPUT				
AC Output Voltage*4	230V~50Hz			
Rated Output Power	2400W			
After Being Connected ACOutput	4800W			
Output Waveform	Pure Sine Wave			
UPS Switching Time	10ms			
Cigarette Lighter Socket Output	12V 10A			
DC Output*2	12V 3A (Each)			
USB-A Output*2	5V3A, 9V2A, 12V1.5A, 18W Max			
USB-C Output*2	5V/9V/12V/15V/20V3A, 20V5A, 100W Max			
Wireless Charge	10W			
LED Light	5W			
Physical Protection	IP54			

Warranty

We assure the original purchaser that our products are free of defects in workmanship and materials during the applicable warranty period determined in the "Warranty Period" section below, but the exclusions set below are excluded.

This warranty statement sets our total and exclusive obligations. We will not assume, or authorize any person to assume for us any other liability related to the sale of our products.

Warranty

The warranty is 12 months, and the warranty period is calculated by the original consumer purchaser from the date of purchase. In order to determine the start date of the warranty period, a sales receipt from the first consumer purchase or other reasonable documentary proof is required.

Repair processing

We will repair or replace any products that cannot be operated due to defects in workmanship or materials within the applicable warranty period. If a valid claim is filed within the applicable period, we can choose;

Replacement product.

It can be exchanged with products of equal value. The replacement product bears the remaining warranty period of the original product or replaces it (90) days from the date of warranty, whichever is greater. The customer is responsible for the shipping cost of the return

Exclusions

The warranty of ARESSeries does not apply to 1) any product that is modified, misused, abused, damaged by accident, or used for anything other than normal consumer use as authorized in current product literature, or 2) any product purchased through an online auction house. The warranty of ARES does not apply to the battery cell unless the battery cell is fully charged by you within seven days after your purchase of the product and at least every 6 months thereafter.

After-sales service

For after-sales maintenance service, please contact our customer service team. Feel free to explore our website at www.srportables.com, where you can locate the AI Product FAQ page.

Due to constant technology updates, product specifications, and configuration changes, please refer to the actual product.

